


Addendum to Pergola Assembly Instructions


9-20-06

IMPORTANT: Please read these instructions before proceeding with Step 1


- Step 1 Holes are drilled using a masonry bit.
- Step 7 Included with the trim is a weather guard which is inserted after the top trim ring before step 8.
- Step 17 Use the table (Runner Mounting Bracket Placement Guide) below for bracket mounting hole placement. Make sure to refer to the guideline for your size pergola. Position the first hole as indicated, working from the X previously marked on the beams. All additional brackets are positioned from the first hole in the first bracket.
- Step 23 Use an extra long drill bit in order to reach through the beam into the mounting bracket.
- Step 30 Aluminum inserts are provided for additional stability. They should be inserted into the top cell of the runners.

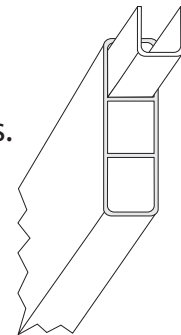


Runner Mounting Bracket Placement Guide

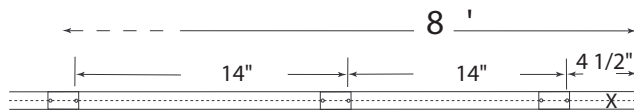


Requires 7 runners

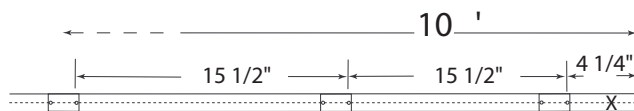


Requires 8 runners

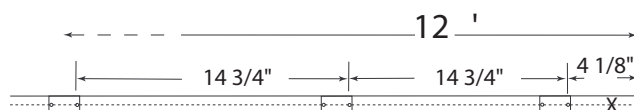


Requires 10 runners

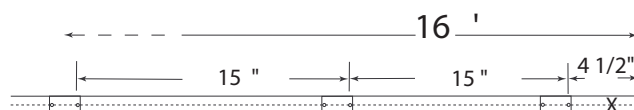

Requires 13 runners

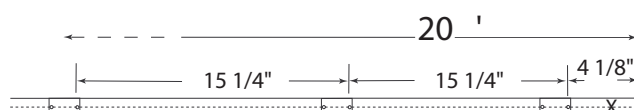

Requires 16 runners

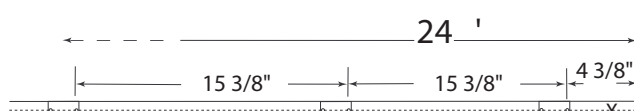

Requires 19 runners